

Thank You

Thanks for purchasing a Hammer Union Pressure Transmitter from us! We appreciate your business and your trust. Please take a moment to familiarize yourself with the product and this manual before installation. If you have any questions, at any time, don't hesitate to call us at 888-525-7300.

NOTE: Scan the QR code to the right to see the full user manual on your tablet or smartphone. Or visit www.apgsensors.com/support to find it on our website.



Table of Contents

1. Description	5. Mounting Instructions	9. Repair & Return Information
2. How To Read Your Label	6. Wiring Information	10. Removal Instructions
3. Warranty	7. Calibration Shunt Procedure	11. Hazardous Location Wiring
4. Dimensions	8. General Care	

1 Description

APG's Hammer Union Pressure Transmitter is extremely rugged and designed for the environments of land-based and offshore drilling installations. It is certified intrinsically safe for hazardous areas in the US, Canada, Europe and internationally by CSA, ATEX, and IECEx for Class I, Zone 0, and Class II, Division 1, Groups C and D environments.

2 How To Read Your Label

Each label comes with a full model number, a part number, and a serial number. The model number for your Hammer Union Pressure Transmitter will look something like this:

▲ SAMPLE: HU-L24-10K-E2-P34-K0

The model number correlates with all the configurable options and tells you exactly what you have. Compare the model number to the options on the datasheet to identify your exact configuration. You can also call us with the model, part, or the serial number and we can help you.

The label also includes the pinout.

You will also find all hazardous certification information on the label.


3 Warranty

This product is covered by APG's warranty to be free from defects in material and workmanship under normal use and service of the product for 24 months. For a full explanation of our Warranty, please visit <https://www.apgsensors.com/about-us/terms-conditions>. Contact Technical Support to receive a Return Material Authorization before shipping your product back.

Scan the QR code below to read the full explanation of our Warranty on your tablet or smartphone.



4 Dimensions

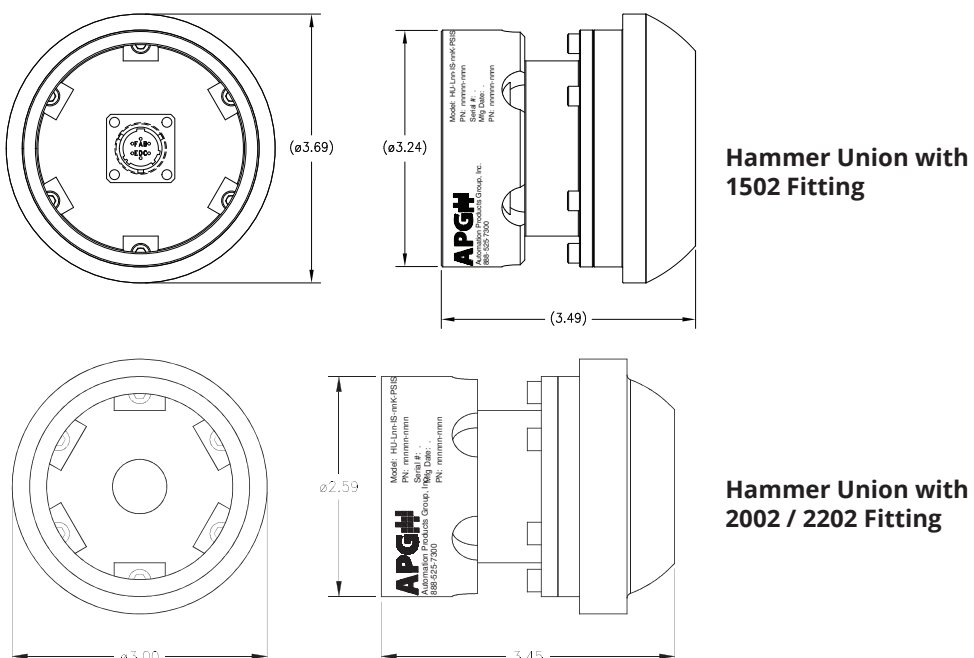

Hammer Union Pressure Transmitters

Installation Guide

For The HU-L24 & HU-L27



Automation Products Group, Inc.
1025 W 1700 N Logan, UT 84321
www.apgsensors.com | phone: 888-525-7300 | email: sales@apgsensors.com

Doc #9004050 Rev B
Part #122950-0002

5 Mounting Instructions

Mounting your pressure transducer is easy if you follow a few simple steps:

- Ensure mating union faces are clean, dry, and free of debris.
- Place Hammer Union Pressure Transmitter in socket.
- Place Hammer Union wing nut on transmitter and tighten into place.
- Hammer wing nut until tight.

DANGER: Mismatched unions and nuts can result in dangerous or hazardous equipment failures. Always check identifications on both union pieces and nuts prior to installation. Only use pieces with matching union figure numbers, sizes, and pressure ratings.

6 Wiring Information

The label on your Hammer Union Pressure Transmitter includes the pinout table for your device. Check that your electrical system wiring matches the pinout table on your device prior to electrical installation.

IMPORTANT: Refer to section 11 for Hazardous Location Wiring.

IMPORTANT: Hammer Union Pressure Transmitter MUST be installed according to drawing 9002460 (Intrinsically Safe Wiring Diagram) to meet listed approvals. Faulty installation will invalidate all safety approvals and ratings.

7 Calibration Shunt Procedure

APG's Hammer Union Pressure Transmitters provide a true 20.0 mA calibration shunt output when 10 to 28 VDC is applied to the designated + Shunt Cal pin. See the pinout chart on your Hammer Union Pressure Transmitter's label.

8 General Care

Your Hammer Union Pressure Transmitter is designed to be maintenance free. As such, there are no customer servicable parts on or in the device. However, in general, you should:

- Avoid touching the diaphragm. Contact with the diaphragm, especially with a tool, could permanently shift the output and ruin accuracy.
- Clean the diaphragm or the diaphragm bore only with extreme care. If using a tool is required, make sure it does not touch the diaphragm.

9 Repair & Return Information

If your pressure transmitter needs repair, contact us via email, phone, or online chat on our website. We will issue you an RMA number with instructions.

- Phone: 888-525-7300
- Email: sales@apgsensors.com
- Online chat at www.apgsensors.com

IMPORTANT: All repairs and adjustments of the Hammer Union Pressure Transmitter must be made by the factory. Modifying, disassembling, or altering the Hammer Union Pressure Transmitter on site is strictly prohibited.

10 Removal Instructions

Removing your Hammer Union Pressure Transmitter from service must be done with care. It's easy to create an unsafe situation if you are not careful to follow these guidelines:

- Make sure the pressure is completely removed from the line where your sensor is installed. Follow any and all procedures for safely isolating any media contained inside the line.
- Remove the Hammer Union wing nut.
- Remove your Hammer Union Pressure Transmitter.
- Clean the sensor's fitting and diaphragm of any debris (see instructions in Section 8 above) and inspect for damage.
- Store your sensor in a dry place, at a temperature between -40° F and 180° F.

DANGER: Removing your Hammer Union Pressure Transmitter while there is still pressure in the line could result in injury or death.

11 Hazardous Location Wiring

Intrinsically Safe Wiring (4-20mA / 0-5VDC Output)

REVISIONS					
ZONE	REV	DESCRIPTION	CO / EP	DATE	APPROVED
--	D	SEE CHANGE ORDER.	CO-3360	7/10/2018	T. Reidhead

INSTALLATION IN CLASS I, DIVISION 1, GROUPS C AND D
INSTALLATION IN CLASS I, ZONE 0, AEx ia IIB T4 Tamb -40° C TO 85° C

INTRINSICALLY SAFE BARRIER

NON-HAZARDOUS AREA | **HAZARDOUS AREA**

PARAMETERS:
 $V_{max}, U_i = 28VDC$
 $I_{max}, I_i = 110 mA$
 $C_i = 60.89 nF$
 $L_i = 7.7mH$

HAMMER UNION
4-20 mA OUTPUT

INTRINSICALLY SAFE BARRIER

NON-HAZARDOUS AREA | **HAZARDOUS AREA**

PARAMETERS:
 $V_{max}, U_i = 28VDC$
 $I_{max}, I_i = 110mA$
 $C_i = 60.89 nF$
 $L_i = 7.7 mH$

HAMMER UNION
0-5VDC OUTPUT

1. BARRIERS MUST BE NRTL APPROVED AND MUST BE INSTALLED IN ACCORDANCE WITH MANUFACTURER'S INSTRUCTIONS.
2. THIS DEVICE MUST BE CONNECTED TO AN APPROVED SAFETY BARRIER.
3. BARRIER PARAMETERS MUST MEET THE FOLLOWING REQUIREMENTS:
 - A. $V_{oc}/U_o \leq V_{max}/U_i$ $C_a/C_o \geq C_i + C_{cable}$
 - B. $I_{sc}/I_o \leq I_{max}/I_i$ $L_a/L_o \geq L_i + L_{cable}$
 - C. $P_o \leq P_i$
4. MAXIMUM NON-HAZARDOUS AREA VOLTAGE MUST NOT EXCEED 250V.
5. INSTALL IN ACCORDANCE WITH THE NEC (ANSI/NFPA 70) AND ANSI/ISA RP 12.6 (U.S. LOCATIONS) OR CANADIAN ELECTRICAL CODE, PART 1 (CANADIAN LOCATIONS).
6. TO MAINTAIN IP67/65 RATING, THE EQUIPMENT SHALL BE INSTALLED WITH A CERTIFIED IP67/65 MATING CONNECTOR.

ACTUAL PINOUT PER LABEL ON UNIT

*** WARNING:**
SUBSTITUTION OF COMPONENTS MAY IMPAIR INTRINSIC SAFETY.

AGENCY APPROVED DRAWING

DO NOT ALTER WITH OUT PROPER APPROVAL FROM THE CONTROLLING AGENCY AUTHORIZED PERSON AND THE NOTIFIED BODY.

PROPRIETARY AND CONFIDENTIAL
THIS DRAWING IS THE PROPERTY OF AUTOMATION PRODUCTS GROUP, INC. LOGAN, UTAH AND MAY NOT BE USED, REPRODUCED, PUBLISHED, OR DISCLOSED TO OTHERS WITHOUT WRITTEN CONSENT OF THE COMPANY. IF LOANED, IT IS SUBJECT TO RETURN UPON DEMAND AND MAY NOT BE USED IN ANY WAY DIRECTLY OR INDIRECTLY DETRIMENTAL TO THE COMPANY.

UNLESS OTHERWISE SPECIFIED DIMENSIONS ARE IN INCHES AND TOLERANCES ARE AS FOLLOWS:
 TO TOLERANCE ON ANGLES: ±1°
 2 PLACES: ±.01
 3 PLACES: ±.005
 INTERPRET DIMENSIONS AND TOLERANCES PER ASME Y14.5-2009

THIRD ANGLE PROJECTION

APPROVALS	DATE
DRWN: R. OBO RN	4/21/2006
CHRN: E. TO LMAN	4/21/2006
APVD: M. HARVEY	4/21/2006

1025 West 1700 North
Logan, Utah USA
888.525.7300

APG
AUTOMATION PRODUCTS GROUP, INC.

CSA INTRINSICALLY SAFE HAZARDOUS INSTALLATION DRAWING HAMMER UNION PRESSURE TRANSMITTER

SHEET	CAD CODE	PART NO	DOCUMENT NO	REV
C	52797	PER ORDER	9002460	D

SCALE: 1:1 DO NOT SCALE DRAWING SHEET 1 OF 1